



* Figures shown are single spring isolators. Installation instructions remain the same for multiple spring isolators.

1. Coordinate location of each isolator with project submittals.
2. Remove lockdown bolt/nut on each isolator and screw the height adjustment bolt/nut clockwise as far as possible.
3. Raise and block equipment to isolator free height, and place isolators underneath equipment.
4. Turn the height adjustment bolt/nut counter-clockwise till it touches equipment base. Repeat for all isolators.
5. Attach lockdown fasteners to each isolator and hand-tighten.
6. Continue to turn height adjustment bolt/nut counter-clockwise gradually on all isolators till equipment just lifts of temporary blocks and is level. Do NOT overload one isolator, but distribute weight proportionally by turning each isolator height adjustment bolt/nut one or two full turns in sequence.
7. Do NOT shift equipment laterally while it is supported on isolators.
8. Anchor isolator base plate to structure (if required per project specifications).
9. Tighten lockdown bolt/nut securing equipment to isolator.
10. Free-standing spring mounts are NOT designed to withstand any lateral forces.

Notes / Remarks :

VIBRATION MANAGEMENT CORPORATION

5930 THOMAS ROAD
HOUSTON - TEXAS 77041 , USA

Internet address:
www.vimco.biz

Project :
Client :
Consultant :
Representative:

Title : **Bx, OSM**
Free-Standing Spring Mount
Installation Instructions

Drawing no.
I-202501.01

Rev. 0