

Pistol Grip Position:



1. With the Bantam Tool in the Pistol Grip Position, Place the band in the tool with sufficient band in the winding mandrel.




2. With ratcheting action, tension the band until clamp is tight. If necessary, band may be repositioned by releasing tension with levers.



3. Roll tool over as far as tool will go, and push forward cutter handle. Remove tool and tap down ears of clip to complete clamp. Remove excess material from winding mandrel.

Straight or Angle Position:

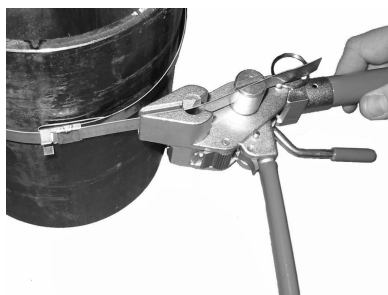

1. With the Bantam Tool in the Pistol Grip Position, Place the band in the tool with sufficient band in the winding mandrel.



2. With ratcheting action, tension the band until clamp is tight.



3. Roll tool over as far as tool will go, and push forward cutter handle. Remove tool and tap down ears of clip to complete clamp.

Notes / Remarks :

VIBRATION MANAGEMENT CORPORATION

5930 THOMAS ROAD

HOUSTON - TEXAS 77041 , USA

Internet address:

www.vimco.biz

Project :
Client :
Consultant :
Representative:

Title :

**BANTAM TOOL
Operating Instructions**

Drawing no.
I-273631.03

Rev. 0