


INSTALLATION INSTRUCTIONS

- (1) 'AR' RAIL SHOULD FIRST BE SET ON INSTALLED CURB SEAL AND FASTEN AS REQ'D. NOTE COMPRESSOR END SHOULD MATCH THAT OF UNIT ORIENTATION.
- (2) ATTACH FLEX CONNECTIONS TO UNIT S/A AND R/A CONNECTIONS
- (3) SET UNIT ON 'AR' RAIL SEAL AND FASTEN AS REQ'D
- (4) ATTACH LOOSE ENDS OF FLEX CONNECTIONS TO ROOF SLEEVE OR DUCT CONNECTIONS FROM BELOW
- (5) INSTALL EARTHQUAKE RESTRAINTS IF REQ'D (SEE SEPARATE DRAWING)

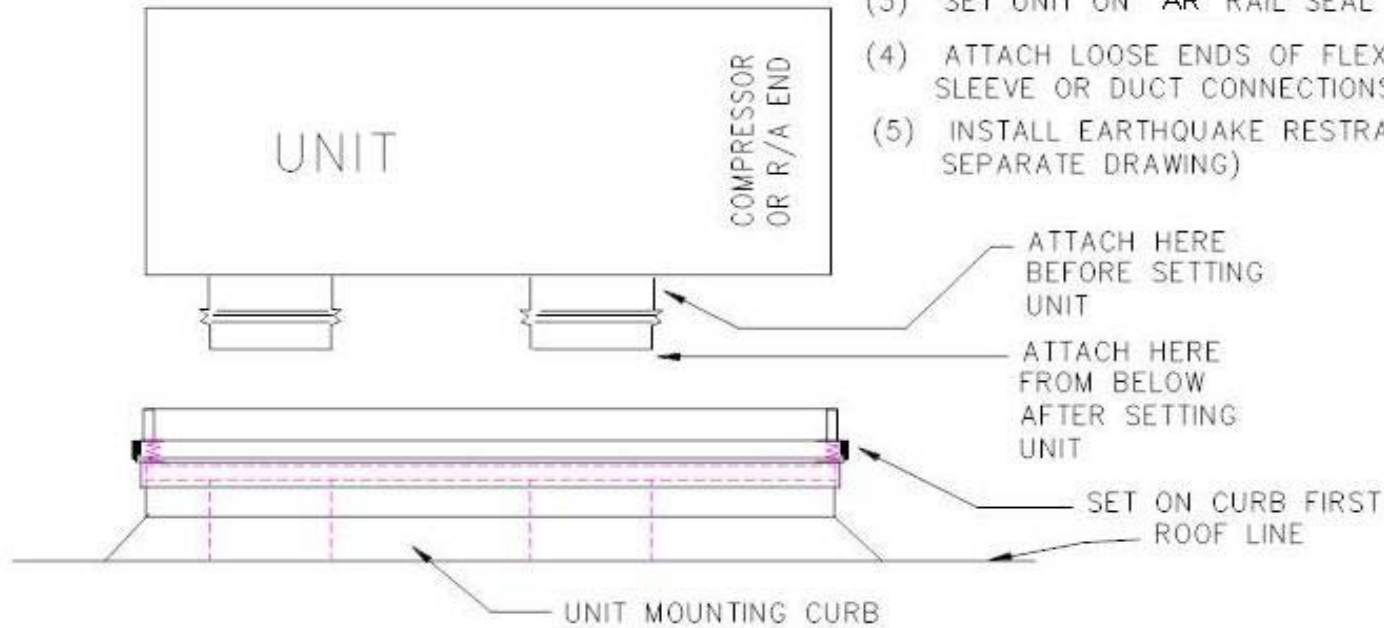

Notes / Remarks :

Project :
 Client :
 Consultant :
 Representative :

Title :

'AR' RAILS
 installation

Drawing no.
I-300011.01

Rev. 0