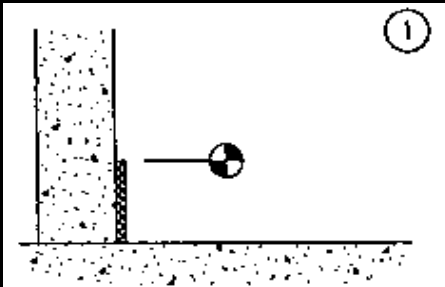
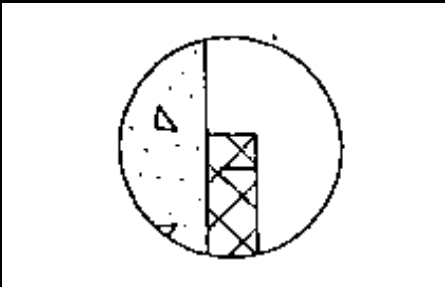
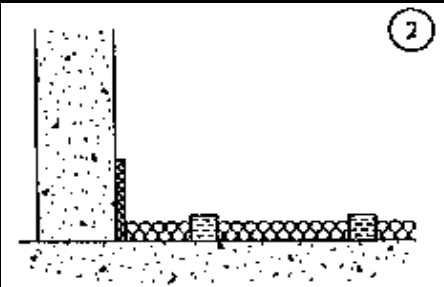
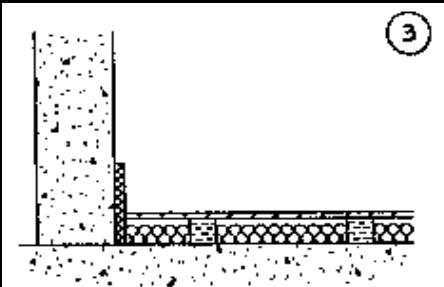
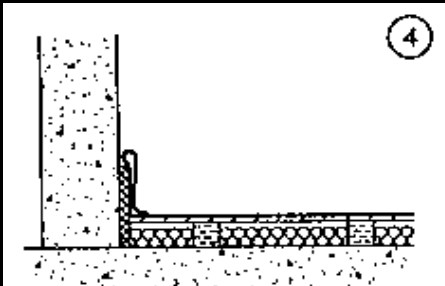
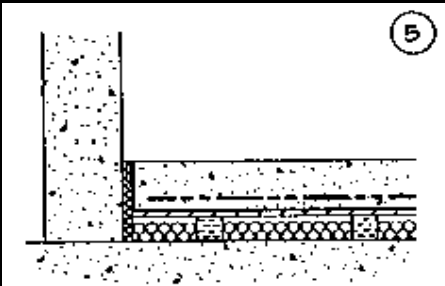
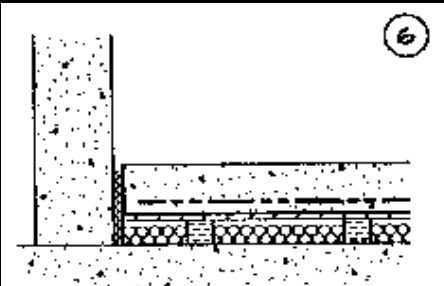



VIBRATION MANAGEMENT CORPORATION

5930 THOMAS ROAD , HOUSTON , TEXAS 77041 , U.S.A

INTERNET ADDRESS: www.vimco.biz

 <p>STRIKE FLOATING SLAB GRADE. SET AND ADHERE PERIMETER BOARDS TO ALL CURBS AND PENETRATIONS.</p>	 <p>NOTE: PERIMETER BOARD FILLER STRIP MUST BE ON TOP WITH TEAR SLOT FACING TOWARDS FLOOR TO BE POURED.</p>	 <p>ROLLOUT ISOLATION MATERIAL WITH MOUNTS AND ACOUSTIC BLANKET. INSERT ADDITIONAL MOUNTS FOR HIGH LOAD AREAS AS DETAILED IN DRAWINGS.</p>	 <p>LAY PLYWOOD POURING FORM SHEETS ON TOP OF ISOLATION MOUNTS, STAGGERING JOINTS AND CONNECT EDGES USING JUNCTION PLATES AND SCREWS</p>
 <p>INSTALL TWO LAYERS OF POLY FILM OVER FLOOR. EXTEND UP AND OVER PERIMETER ISOLATION. SEAMS SHALL BE OVERLAPPED 4" AND CONTINUOUSLY TAPED TO PREVENT AGAINST CONCRETE LEAKAGE.</p>	 <p>INSTALL REINFORCING RODS AND POUR FLOATING SLAB CONCRETE.</p>	 <p>AFTER CONCRETE HAS CURED REMOVE FILLER STRIP FROM PERIMETER BOARD.</p>	 <p>CAULK ALL JOINTS WITH PERIMETER SEALANT.</p>

Notes / Remarks :	Project : _____	Title : Rollout Floor System Installation Sequence	Drawing no. S-2600.91
	Client : _____		
	Consultant : _____		
	Representative : _____		
			Rev. 0